

# How To Lubricate A Pvc Ball Valve

## **Présentation détaillée :**

Lubricating your PVC ball valve is an important part of its upkeep. By keeping it lubricated, you can help it to last longer and avoid potential damage. In this article, we'll show you how to properly lubricate a PVC ball valve so that it continues to work properly for years to come.

### **Turn off the water to the valve**

Locate the PVC ball valve handle. This is the knob that you turn to open and close the valve. To lubricate a PVC ball valve, you'll need to first turn off the water to the valve. Then, locate the PVC ball valve handle. This is the knob that you turn to open and close the valve. Once you've found the handle, unscrew it from the valve. This will expose the inner workings of the valve. You'll see a small ball inside the valve.

This is what controls the flow of water through the valve. To lubricate the valve, simply apply a few drops of lubricant to this ball. You can use any type of lubricant, but we recommend using a silicone-based lubricant for best results. Once you've applied the lubricant, screw the handle back onto the valve and turn on the water. Your PVC ball valve should now be lubricated and working properly!

### **Remove the handle**

Assuming you have a basic understanding of how a PVC ball valve works, the first step in lubricating one is to remove the handle. This will give you access to the ball, which is what you need to lubricate. Once the handle is off, use a small brush or cotton swab to apply a light layer of lubricant to the ball. Be sure to get all sides, including the edges. You don't want to overdo it, so just a light coating will do. Once you're done, reattach the handle and you're good to go!

### **Use a lubricant on both the inside and outside of the ball**

If you have a PVC ball valve, you'll want to make sure that you lubricate it regularly. This will help keep it in good working order and prevent it from sticking.

To lubricate your PVC ball valve, you'll need to use a lubricant on both the inside and outside of the ball. You can find lubricants at most hardware stores. Apply the lubricant to the ball using a clean cloth or brush.

Make sure to lubricate your PVC ball valve every few months to keep it in good condition.

### **Reattach the handle**

Once you have finished lubricating the ball valve, it is time to reattach the handle. This is a relatively easy process, but there are a few things to keep in mind. First, make sure that the handle is correctly aligned with the body of the valve. Second, tighten the screws or bolts that hold the handle in place, but be careful not to over-tighten them. Doing so could strip the threads or damage the handle itself. Finally, check to ensure that the handle can move freely and smoothly before you close the valve.

### **Turn the water back on**

Now that you have successfully lubricated your PVC ball valve, it is time to turn the water back on. This can be done by simply opening the valve fully and then closing it again. If everything was done correctly, you should now have a working PVC ball valve that is properly lubricated.